

SADOWSKY GUITARS LTD.

2107 41ST AVENUE • 4TH FLOOR
LONG ISLAND CITY, NY 11101

PHONE (718) 433-1990
FAX (718) 433-1993

 
Sadowsky Bass Control Knobs

Preamp is powered by a 9-volt alkaline battery (battery life approximately 6-12 months), which is switched on via the input jack. To preserve battery life, unplug cables when not in use.

Flat response is achieved when bass and treble boost controls are set to 0 (fully counterclockwise) and vintage tone is set to 10 (fully clockwise).

Adjust bass and treble controls; start with the controls fully counterclockwise. Setting bass and treble controls to 10 is not recommended. On all models (unless otherwise specified) the pickup pan control selects the bridge pickup when clockwise and the neck pickup when counterclockwise.

When engaging the active/passive switch, there is an unavoidable electronic pop which occurs. If you use the switch while playing, please be sure to turn your volume control to 0 before engaging the switch.

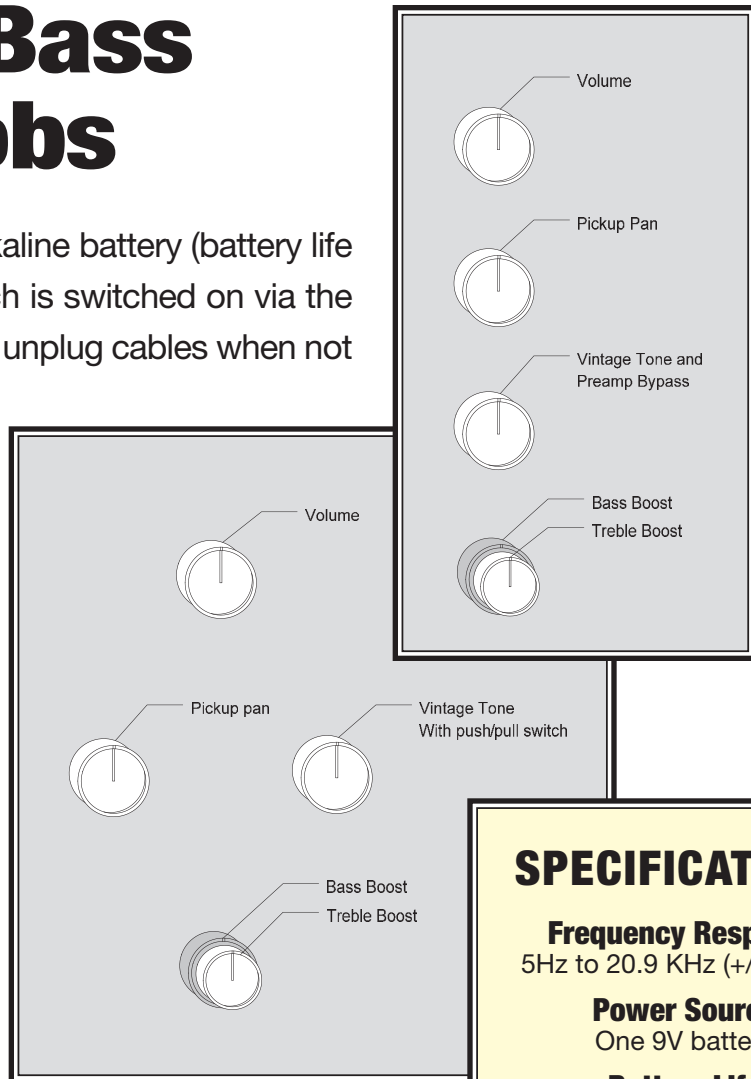

SPECIFICATIONS

Frequency Response

5Hz to 20.9 KHz (+/- 1.5db)

Power Source

One 9V battery

Battery Life

625 hours

Bass Control

+13db @ 40Hz

Treble Control

+13db @ 4Khz

Total Harmonic Distortion

.18% @ 1 KHz

Input Impedance

1 Meg Ohm

Output Impedance

1K Ohm